


12/2021


Nr.MK 28-1/2

1. Drawing of the bathtub installation
Position der Wanne aufzeichnen


LEFT
LINKS

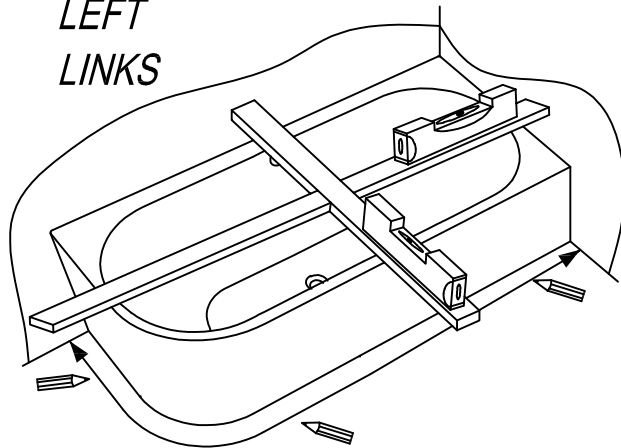

RIGHT
RECHTS

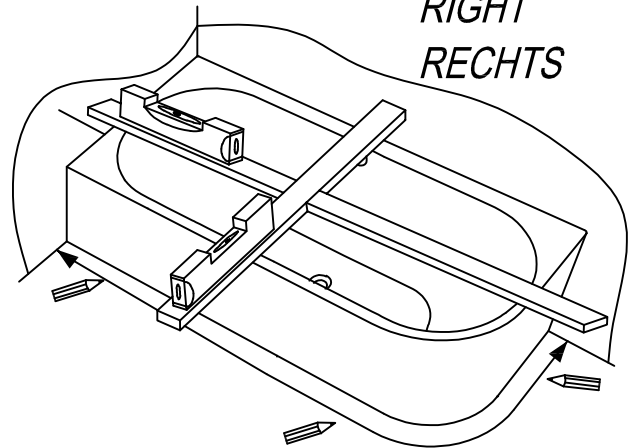


2. Leveling of the bathtub height
Höhe der Wanne nivellieren

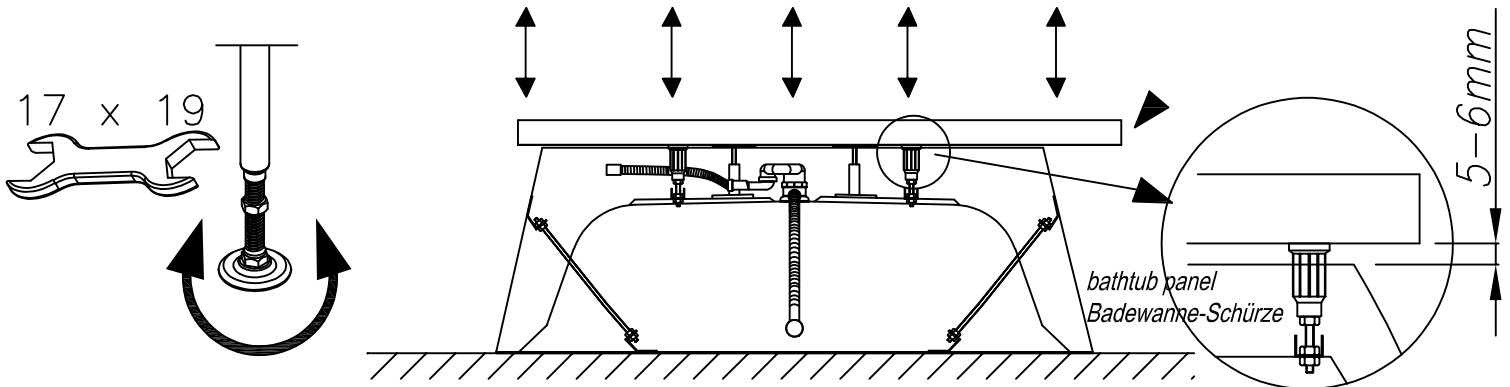


3. Installation of the bracket on the floor
Träger in den Boden befestigen

LEFT
LINKS

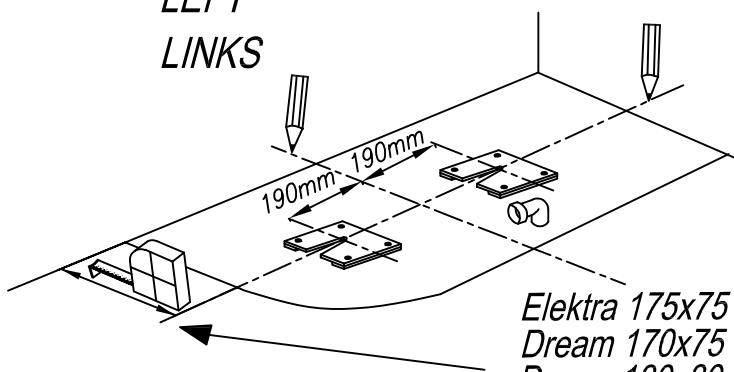


RIGHT
RECHTS

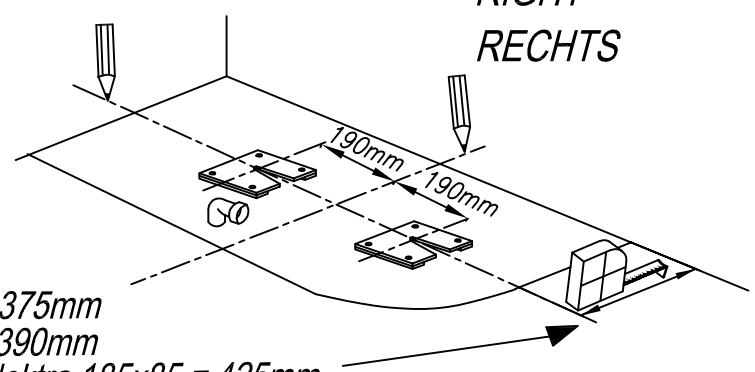


Elektra 175x75 = 375mm
Dream 170x75 = 390mm
Dream 180x80, Elektra 185x85 = 425mm

3a.

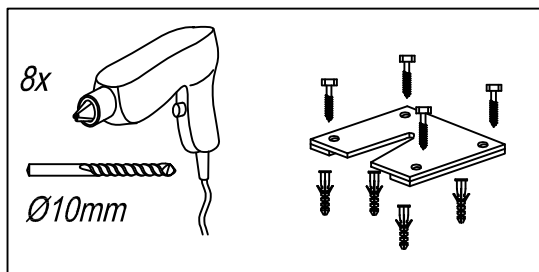


3b.

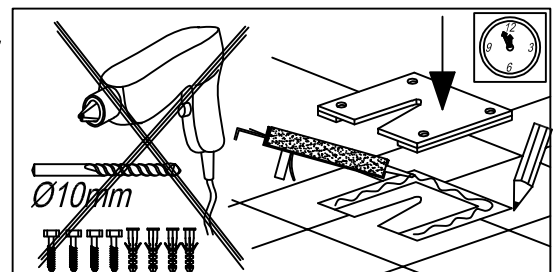


4. Installation of siphon
Siphon-Montage

Nr.MK 28-2/2

LEFT
LINKS


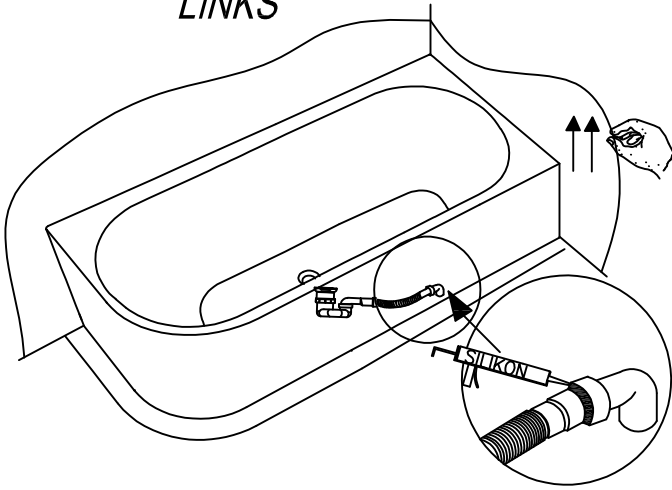


RIGHT
RECHTS

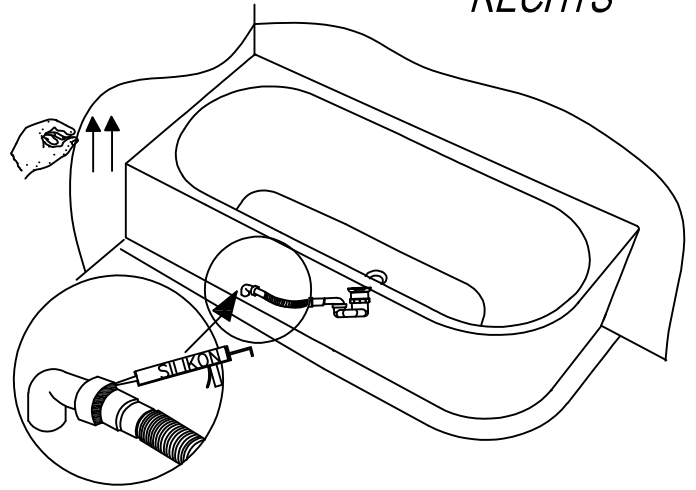

5. Installation of the bathtub in the mounted bracket
Badewanne in den fixierten Träger stellen

LEFT
LINKS

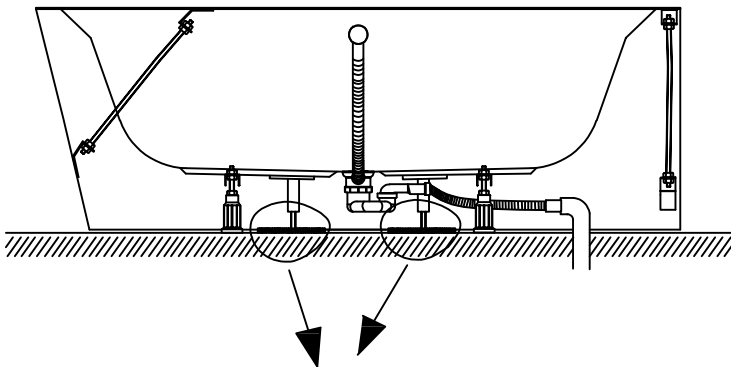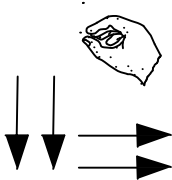

RIGHT
RECHTS

